




User's manual  
RP380 pilot display  
for RR400/410/420 timer

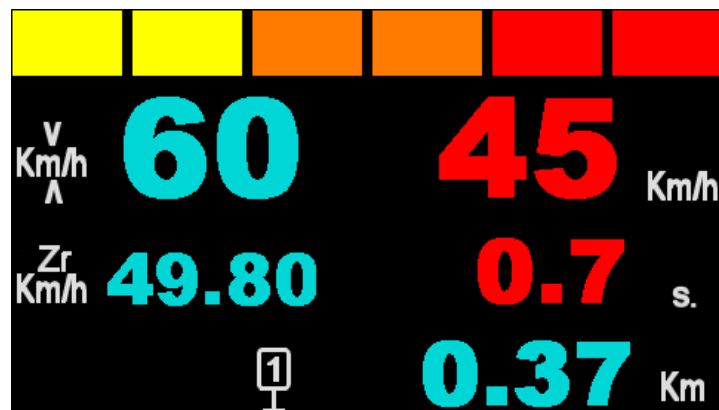

Version 230901

23 September 2023

CRISARTECH  
+33 (0)5.63.93.25.24  
[www.crisartech.com](http://www.crisartech.com)

C. MARQUES  
[christophe.marques@crisartech.com](mailto:christophe.marques@crisartech.com)

## 1 Ergonomics


The screen is slave to the RR4xx. Its display is modeled on the RR4xx "pilot" page, so the configuration of the display is to be done on the RR4xx.

## 2 Firmware updates

An update program is delivered in a compressed "zip" file. Files have to be unzipped on a USB drive, in a directory named **opus\_ud4** located at the "root" of the drive, as in the image below:



Insert the USB key into the connector (a beam coming out of the connector behind the display or a slot on the left-hand side, which can be hidden by a sticker), and the display will read it. If it asks you to remove it, ignore it. After a few seconds, the display will show the following update screen:

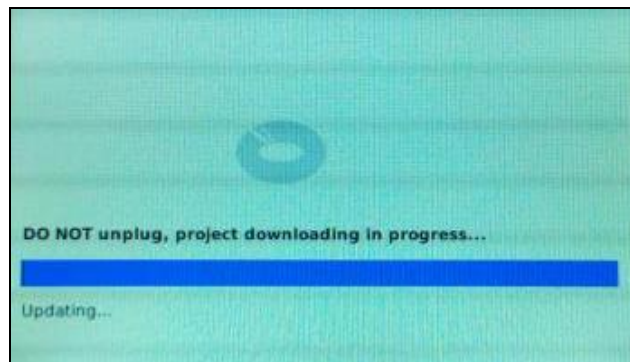

**Do not turn off the power** or remove the USB key before the procedure is complete: the display will restart. Once the display has restarted, you can remove the USB key.

You can check the version during start-up in the bottom right-hand corner:



For example, here, version 230901 dated 1 September 2023